DIGITAL SAFE

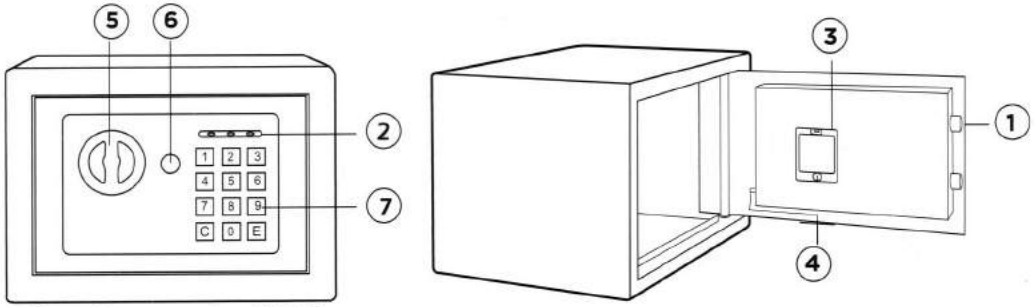

Preset user code : "159"

ENGLISH SPECIFICATIONS

1. Locking Bolts
2. Status LED Lights
3. Battery compartment
4. Reset button
5. Master knob
6. Key lock (cover)
7. Touch panel

NEDERLANDS SPECIFICATIES

1. Vergrendelbouten
2. LED indicatoren
3. Batterijcompartiment
4. Resetknop
5. Draaiknop
6. Sleutelklep voor noodbediening
7. Bedieningspaneel

MOUNTING METHOD:

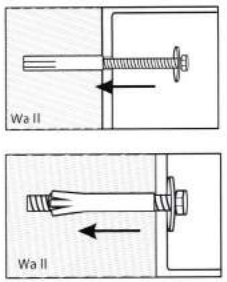

Profitect

8 719828 534094

USING EMERGENCY KEY

1. Insert the emergency key into the lock and turn it counterclockwise.
2. Turn the Master knob clockwise to open the door.

Attention: do not store the emergency key in your safe!

INSERT THE BATTERIES

1. Open the door.
2. Insert 4 x AA batteries.
3. If the red & green light are on at the same time; low voltage

Attention: When outage, you should reset the user and master code.

SET USER CODE

1. Open the safe.
2. Open the battery compartment lid, and press the red button until you hear one beep and the yelow light goes on.
3. Input yur user's code (3 to 8 digits) then press "C" or "E". Once the code is entered corect you will hear one beep and the yellow light turns off.

SET MASTER CODE

1. Open the safe, input "0" twice and press the red reset button. Start setting the master code when the yellow light goes on.
2. Input the new master code (3 to 8 digits)
3. Press "C" or "E" to confirm and the yellow light will turn off, which indicates a succesful new master code.

OPENING THE SAFE

1. Input your user code or master code. Each pressing will result in a buzzer and yellow lights will flash.
2. Press "C" or"E"; the green light will show
3. Rotate the know clockwise and pull outwards within 5 seconds

CLOSING THE DOOR

1. Turn the knob counterclockwise.

AUTOMATIC LOCK

1. Three continuous wrong entries will active the warning beep for 20 seconds.
2. Another 3 wrong entries will activate the warning beep for 5 minutes.

MOUNTING METHOD

1. Drill holes for clamping screws in the right place.
2. Turn the clamping screws counterclockwise to seperate.
3. Use the clamping screws to secure the safe to the wall or floor and tighten the screws.

GEBRUIK VAN NOODSLEUTELS

1. Steek de noodsleutels in het slot en draai deze tegen de klok in.
2. Open door de draaiknop met de klok mee te draaien.

Let op: bewaar de sleutels niet in de kluis!

PLAATS DE BATTERIJEN

1. Open de deur.
2. Plaats 4x AA batterijen
3. Als het rode lampje en het groene lampje branden, betekent dit dat de spanning te laag is.

Let op: Bij stroomuitval moet de gebruikers- en master code gereset worden.

GEBRUIKERSCODE INSTELLEN

1. Open de kluis.
2. Open de deksel van het batterijcompartiment en druk op de rode knop totdat u 1 piepje hoort en het gele lampje gaat branden.
3. Voer de gebruikerscode in (3 tot 8 cijfers) en druk op "C" of "E". Nadat de code correct is ingevoerd hoort u een pieptoon en zal het gele lampje uitgaan.

MASTERCODE INSTELLEN

1. Open de kluis, voer tweemaal "0" in en druk op de resetknop. Begin met het instellen van de mastercode wanner het gele lampje brand,
2. Voer de nieuwe mastercode in (3 tot 8 cijfers)
3. Druk op "C" of "E" om te bevestigen en het gele lampje zal uitgaan. Dit geeft aan dat er met succes een nieuwe mastercode is ingesteld.

DE KLUIS OPENEN

1. Voer uw gebruikerscode of mastercode in.
2. Druk op "C" of "E"; het groene lampje zal gaan branden.
3. Draai de knop met de klok me en trek deze binnen 5 seconden naar buiten.

DE KLUIS SLUITEN

1. Draai de knop linksom om de deur te sluiten.

AUTOMATISCH SLOT

1. 3 ononderbroken verkeerde invoeracties activeert de waarschuwingstoon vor 20 seconden.
2. Nog 3 ononderbroken verkeerde invoeracties activeert de waarschuwingstoon voor 5 minuten.

MONTAGE METHODE

1. Boor gaten voor pluggen op de juiste plaats.
2. Draai de schroeven uit de plug
3. Stop de pluggen in de geboren gaten en bevestig hier de kluis aan. Draai de schroeven goed aan om de kluis strak en stevig te bevestigen.